

Spectrum Firmware Update Instruction


Step One

Close all other programs except a browser, you will find help here: <https://www.litegear.com/firmware/>

Step Two

Find and run Spectrum_Firmware_Update_1.3.2.2.exe.


A.) When you see this, click YES.

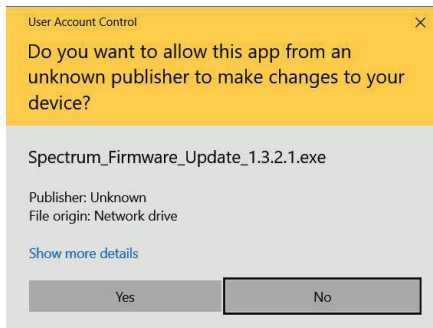


B.) When you see this, click YES.



C.) After completion of the uninstall process, and you see this, just click Ok.

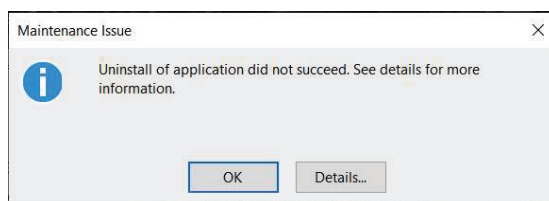

D.) If you don't see the next window (#3) click this icon on the task bar.

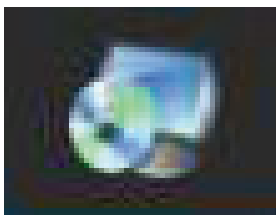

Continue onto next page.


Step Three

Install the new Spectrum updater – click Next.




Step Four

This is a Read Me file. It tells you what the installation will do. Please read it. When you are ready to install – click Install.

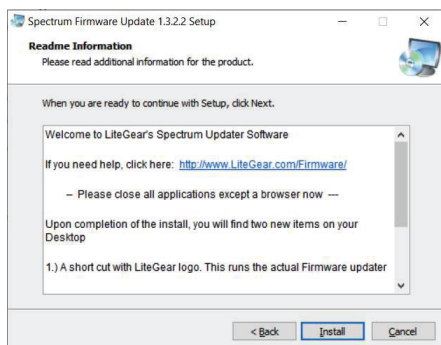

Step Five


This part makes sure you have the USB driver needed for your Updater cable. Click extract and follow the instructions on the follow windows.

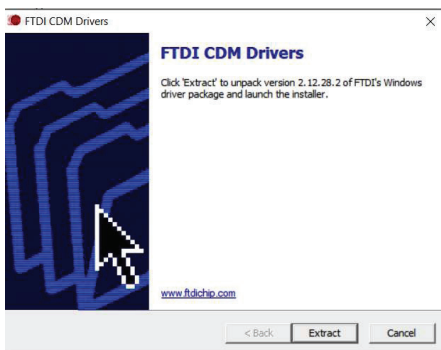

Continue onto next page.

Step Six

You're almost done. This is the finish page. If your updater cable is plugged in, your ballast powered up, and you've navigated to the Firmware update page on the ballast, leave the first check and the program will launch and you're ready to update the firmware on the ballast.

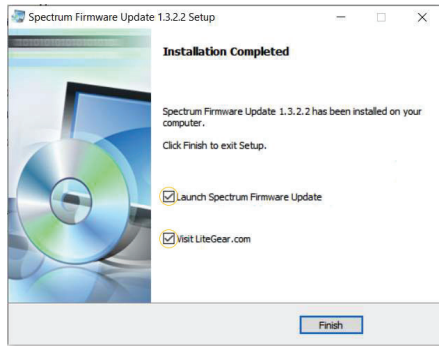

If you're not ready, when you are, look for and click this icon to update your Spectrum Ballast

