



LITERIBBON® QUICKLINX™

QUICK START GUIDE


QUICKLINX AND QUICKLINX PRO CONNECTORS

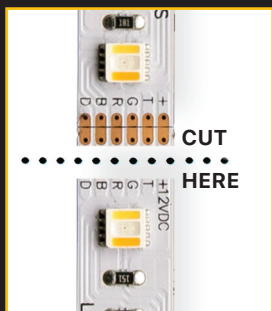

1 Cut LiteRibbon at edge of solder pad.

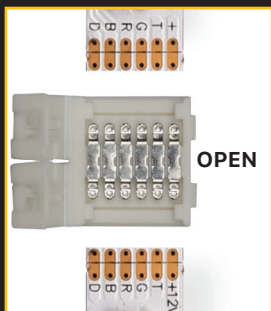

2 Unclip/Open QuickLinX connector.

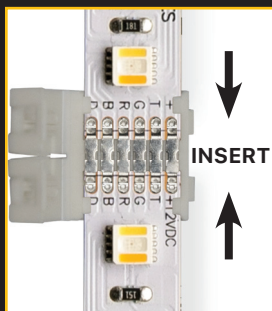

3 Insert LiteRibbon into QuickLinX connector.




4 Close QuickLinX connector until it locks.


LITERIBBON® QUICKLINX™

QUICK START GUIDE

QUICKLINX PRO CONNECTOR TO CONNECTORS

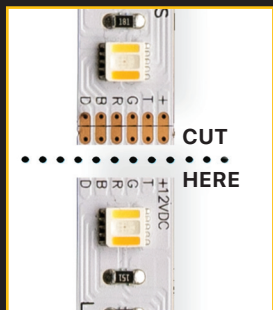


- 1** Cut LiteRibbon at edge of solder pad.

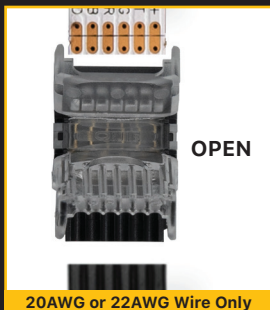


20AWG or 22AWG Wire Only

- 2** Unclip/Open QuickLinX Pro connector.

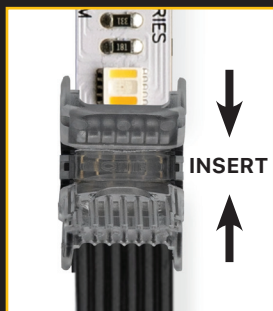

- 3** Insert LiteRibbon and wire into QuickLinX Pro connector.

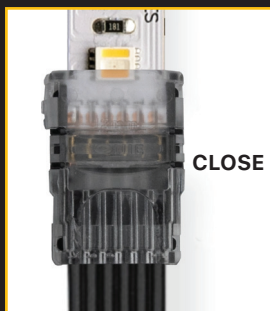

- 4** Close QuickLinX Pro connector until it locks.